
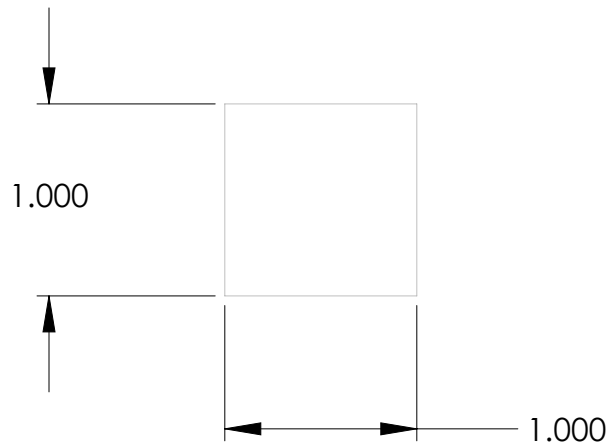


Routing Template - Mini 7.5in & 8in

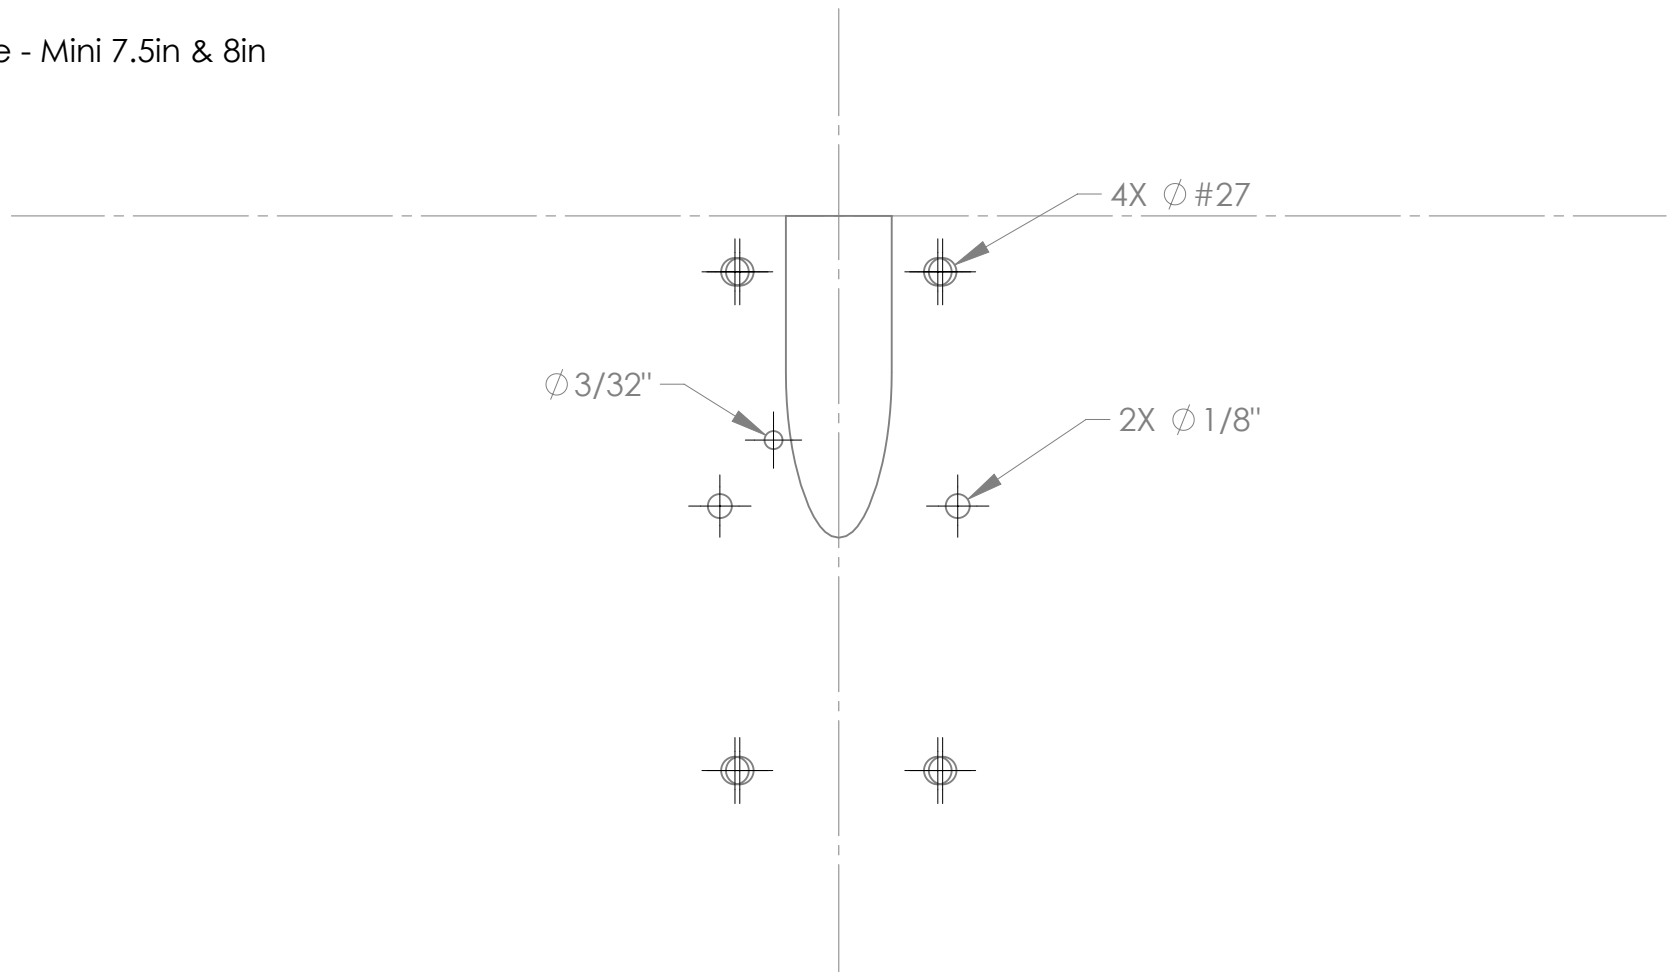

Notes:

- 1) See the installation instructions for detailed instructions.
- 2) Print using "actual size" setting and verify the 1 inch square is correctly sized in both directions.
- 3) Mounting holes (#27) are drilled perpendicular to the tube wall at their locations. Route and access holes ($1/8''$ & $3/32''$) should be made parallel to the shroud center plane.
- 4) The further spaced mounting holes are for $1/4''$ thick wall, the inner set is for $1/16''$ thick wall. Measure your actual wall and adjust your mounting holes accordingly.
- 5) For open carriers only drill the two mounting holes near the shroud. For sealed carriers drill all four.